



**File Name:** bose remote control rc 9 manual.pdf

**Size:** 4255 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 27 May 2019, 18:38 PM

**Rating:** 4.6/5 from 578 votes.

**Status:** AVAILABLE

Last checked: 14 Minutes ago!

**In order to read or download bose remote control rc 9 manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bose remote control rc 9 manual . To get started finding bose remote control rc 9 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# bose remote control rc 9 manual

CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK, These CAUTION marks are located on the back panel and bottom of your Lifestyle center and the bottom panel of your Acoustimass CAUTION To prevent electric shock, match wide blade of plug to wide slot, insert fully. When a cart is used,. Sounds from the left or right side of the picture are sent to left or right front speakers. Ambient sounds or special effects may be sent to the surround rear speakers. Bose Videostage circuitry automatically directs the sound to the correct speakers. Save all packing materials for possible future use. The original packing materials provide the safest way to transport your Lifestyle any part of the product appears damaged, do not attempt to use the system. Notify Bose or your authorized Bose dealer immediately. You may obtain rubber feet part no. 178321, free of charge, from Bose see listings on the inside back cover. The center speaker cable allows up to 20 feet 6.1 m distance from the Acoustimass 1. Place the speaker on line with the vertical center of the screen, above or below which 2. To purchase cables, see your dealer, electronics store, or call Bose Note The surround cables are joined together for your convenience, providing an easy to use cable for connecting the surround speakers. MUTE Silences the speakers. Also restores volume to muted speakers. While this jack accepts most headphone models, you can get an adapter at Bose dealers and most electronics stores, if needed. Connecting headphones automatically shuts off speakers connected to the FIXED OUTPUTs and SPEAKERS A. In the normal setting, the dots on each control are in the 12 o'clock position. You can also locate the normal setting by feeling when the control settles into the notch at this position. See page 24 for instructions on setting the house code. Customer service For additional help in solving problems, contact Bose customer service. See the inside back cover for Bose customer service offices and phone numbers. <http://abogarestudio.com/userfiles/compress-6258-manual.xml>

- **bose remote control model rc-9 manual, bose rc 9 remote control manual, bose remote control rc 9 manual, bose remote control rc 9 manual download, bose remote control rc 9 manual pdf, bose remote control rc 9 manual free, bose remote control rc 9 manual instructions.**

Then turn it on again. If you notice any problems with its functioning, turn it off and contact Bose customer service. Or call Bose directly see inside back cover for phone numbers. Learn more or change settings here. There may be a clear plastic strip protecting the switches. You can remove the strip You will need to change the house code of the expansion remote to match the system. Note The default house code setting is all squares in the down position Please feel free to share additional comments below. I have same problem with RC 9 working intermittently with some light banging. Thanks for the tip above. I tried opening the remote but the case wont open. Is Hi, There are 3 tabs on each side, and 1 on each end. Pry with a thin flat head screwdriver, but be gentle as you can. It is weak, and so the Put batteries in it and point it at the electronics unit and press some buttons Put on your digital camera it can be your phone camera. Aim at the remote. WARNING To reduce the risk of fire or electric shock, do not expose the system to rain or moisture. The exclamation point within an equilateral triangle, as marked on the system, is intended to alert the user CAUTION To prevent electric shock, match wide blade of plug to wide slot, insert fully. Class 1 laser product. This compact disc player is classified as a CLASS 1 LASER PRODUCT. The CLASS 1 LASER PRODUCT label is located on the bottom of the unit. The compact disc player should not be adjusted or repaired by anyone Class B emissions limits. This Class B digital apparatus meets all requirements of the Canadian Interference Causing Equipment. Regulations. Batteries. Please dispose of used batteries

properly, following any local regulations. Do not incinerate. Additional safety information. See the additional instructions on the Important Safety Information page enclosed with this owner's guide. Please read this owner's guide. Please take the time to follow this owner's guide carefully. <http://changdahk.com/upload/compresores-copeland-manual.xml>

It will help you set up and operate your system properly, Save your owner's guide for future reference. No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission. Manufactured under license from Dolby Laboratories, Inc. "Dolby" and the doubleD symbol are trademarks of Dolby Laboratories, Inc. All rights reserved. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectualUse of this copyright protection technology must be authorizedCorporation. Reverse engineering or disassembly is prohibited. MPEG Layer3 audio compression technology licensed by Fraunhofer IIS and THOMSON multimediaWelcomeNote Because DVD is a new technology, please take the time to read through this manualRegion numbers. Region numbers are allocated to DVD players according to where they are sold. Look for theYour system canTypes of discs you can play. The DVD player in your system can play the following types of discs having theConventions used in this owner's guide. Operating instructions include names of buttons on the remote control and on the Media. Center front panel, and menu items appearing on your TV screen and on the Media CenterButton names appear in boldface type. If a button has only a symbol, that will be used. OnScreen Display messages appear in boldface with a line above and below. MEDIA CENTER DISPLAY items are represented by a narrow boldface upper case type. Glossary of termsThe remote control. The advanced radiofrequency remote control works from anywhere within most types ofYou do not need to aim the remote atNote Some types of buildings create "dead spots" where the remote will not operate. MoveYou can also move the media center a few feet to aOn. Off. Mute. All. Tape. TV Input. Turns the system on and off. Mutes the volume in both zones. On. OffPower. PowerGuide. Exit. Settings. Tune. Enter. Seek. Channel. Chapter. Preset. Track. Volume.

Switches between FM and AM when the tuner is on. Selects the TAPE AUDIO INPUT and turns the system on. PreviousStopPower. Repeat. ShufflePowerTV Turns the system on and selects your TV as the sound source. UnmutesUnmutes the volume in the current zone. Toggles the input of your VCRUnmutes the volume in theOn. Displays the contextsensitive menu for the current source.Displays or exits the current title's menu from the DVD disc. Guide. For DVD Displays the menu of all titles on a DVD disc. For TV Displays the electronic program guide of TV listings. Exits the electronic program guide of TV listings, the menu from a DVDEnter. In the Settings menu Selects the next item, up or down, in the menu.Enter. In the Settings menu Selects menu item to the left or right. Moves. In the Settings menu Enters the current option in a menu list. EntersMute. TV InputPower. Previous. StopPlay. ShuffleChannel. TrackRaises or lowers the volume of the current source. Unmutes the current source in the current zone. By a numerical input, allows you to access a DVD chapter, CD track, TV channel, VCR channel, AUX channel, or a radio station preset. Skips to the previous DVD chapter, CD track, TV channel, VCR channel, AUX channel, or radio station preset.PLAYBACK controls. Stops the disc player. If left unchanged for more than 20 minutes, the systemMute. Pauses the disc player. If left unchanged for more than 20 minutes, the discTape. Power. Starts the disc player. Scans backward through the disc currently playing. Press and hold for fastGuide. Scans forward through the disc currently playing. Press and hold for fast forward motion. Shuffle. Plays audio CD tracks in a random fashion. Pressed again cancels this mode. Repeats a CD, CD track, DVD chapter, or DVD title. AUDIO controls. Stop. SpeakersSelects 2, 3, or 5 speaker sound.Surround. ShuffleMedia center control buttons. The Media Center has eight control buttons located under the front cover of the media center. Source. All Off.

Turns the system on or off in zone 1. Turns the system off in all zones. Store. Steps through the

seven available source selections. Enter In the Settings menu Enters the current option in a menu list. Enters the value of a variable in a menu. Unmutes the current Erase. Removes a radio station preset from the system. Stores a radio station preset. Media center display window. The media center display window shows you information about your system. The upper area Figure 1. Elements of the media Treble and bass compensation. The acoustics sound qualities of your room can affect the overall sound quality of any Too much or too little treble. Rooms with too few sound absorbing furnishings, especially those with bare floors and walls, Rooms with a lot of sound absorbing furnishings, such as upholstered furniture, wall to wall Moving speakers farther away from soft furnishings increases treble. You can increase the treble sound by raising. Too much or too little bass. Placement of the Acoustimass module affects the amount of bass you hear. Placing the module closer to the corner of the room will increase the bass. Moving the module away from the You can decrease the bass sound by lowering the Bass Compensation setting to a negative. To increase the bass, raise the bass compensation setting to a positive. Selecting the number of speakers Before you play your first DVD. This section tells you how to use the DVD player in your system to play video DVDs. Before Although some remote control buttons look the same as those For example, in order to display subtitles while watching a In order for Check the label on the media center or on Loading and playing a DVD If not, press Play. Note Automatic play can be turned off. Press the Settings button, select System Setup, Basic DVD operations. If you want to. Do this. Press Pause Press Pause. Press Stop Press Stop Press Chapter. Track Press Chapter. Track While playing the chapter you want to repeat, press. Repeat Repeat.

Using parental controls Loading and playing an audio CD If not, press Play. While playing a CD, the media center display window will show you the album name, track Basic CD operations. Press Pause. Press Stop. Press Track. After track has played for several seconds, Chapter Channel. Track Preset. If track has played for several seconds, press. Track Channel Chapter. Press and hold Press. Shuffle Press. Shuffle If the system is off, this will also turn it on. When it turns on, the radio will be playing the most recently selected FM or AM station. Tuning. You can tune to a radio station in the following ways. Switch between FM and AM. Press. Seek the strongest stations. Press and hold Seek Release to stop at the next strongest To stop sooner, briefly press To begin seeking again without holding down the skip button, briefly press Manually tune to a station. Press Tune. Select a preset station. Press Preset Channel. Preset Track. Key in a preset number on the keypad and press Setting a station preset Store Erasing a station preset Erase In general Turn on your component directly or by using its remote control. If you like, you can program Programming your remote for other components Press the Tape, VCR, or AUX button on the remote or press Source on the media center until This turns your system on and selects the component If the system is already on, this button selects the component. Note Selecting a source turns the system on in surround 5 speaker mode. Press the Speakers button to change the mode. The appropriate indicators light up on the media center when the system is on and the component is selected. Using the VCR sound source. Press VCR on the remote or Source on the media center until VCR appears on the display. This turns your system on in surround 5 speaker mode and selects the VCR sound source Using a tape deck. In a 2 zone system, play the source in zone 1. Set the tape deck to record. Using the settings menus Figure 2 Elements of the onscreen Settings DVD. DVD Play Options.

Sleep minutes. DVD Status. Audio Settings. System Setup. Enter Press the Enter button go to this submenu. Lists options for how to play and view the current DVD. To display the settings menu on your TV screen. Press the Settings button. The displayed menu will contain items related to the currently To exit the settings menu and clear it from your TV screen. Press the Settings button again. To select a menu item. Selected items are highlighted with a lighter color. To enter a submenu. When you see the Enter button symbol to the right of the selected item, then that item has To change a setting. Press the left or right Find the setting you want and press the. Settings button to leave the menu. Your selected setting is stored in the system. Figure 3. Example of changing DVD Play Options

1 of 2. Title. ChapterTitle TimeElapsed. Motion Control. Play 1x. Audio Track. Subtitles. Auto. Chooses an audio track for the current DVD.To view the system status. The settings menu provides a selection for displaying the status of the currently selectedThe system statusFigure 4. A DVD status example. Settings DVD. EnterThe Movie Title. Title 1 of 13. Chapter 1 of 5Subtitle Off. Ratings Limit 8. Repeat Chapter. Region Code1. Displays information about the current source.Changing DVD play options. While playing a DVD movie, there are several play options that can be changed. Figure 5Figure 5. The DVD Play options menu. TV InputPowerPower. DVD Play OptionsGuide. Title Time. StopShuffle. PlayRepeat. Surround. Subtitle Language. Camera Angle. AB Repeat. Title 1 of n. DVD movies are identified by title. If you have a DVD disc with more than one movie, thisChapter 1 of n. A DVD video is divided into chapters. This function lets you select an individual chapter. Title Time h:mm:ss. Chooses a time into the movie. Selects either time elapsed or time remaining in the current DVD title. Chooses direction and speed of DVD playback. Some DVD discs are recorded with more than one soundtrack.

Other soundtracks may provide another language or PCM. To change soundtracks during playPress Settings when done.Turns the subtitles on or off. "Auto" turns subtitles on automatically if audio is not available. Chooses a subtitle language for the current DVD. Camera Angle 1 of maximum on title. Chooses a camera angle from those available on the current DVD title. Repeats a specified section of the DVD movie. To specify a section to repeatThe movie scene is repeated until you press Stop. To resume normal play, press Play. Making audio adjustments. You can adjust the audio of each source individually. Figure 6 shows you a map to the DVD. Play Options menuA menu of the available settings for the current sourceAudio Settings.Figure 6. The audio settingsSettings. AllSettings source. Play. RepeatAudio Settings. Movie EQ. Range CompressionNot available for. FM, AM, or CD. Mono Decoding. Available only when Movie EQCenter Channel. Audio Status. Treble Compensation. Bass CompensationSelecting DVD, TV, VCR, AUX, or TAPE turns the system on in an enhanced mode calledAny additional adjustmentsThis feature is normally engaged when you turn the systemYou can turn this feature off by setting Range Compression Off. Selects Track 1, Track 2, or both of the currently available audio tracks. Displays system audio information. The following example shows you a DVD audio status. Figure 7. Status example DVD audioAudio Settings DVD. Normal Audio. Range Compression. Normal. Center Channel. Zone. Room. Speakers. SettingTreble Compensation Bass Compensation. Displays information about volume and otherYou experience a surround sensation, providing extra enjoyment whenThis feature can be used for mono TV, FM, and. AM programs. This feature is automatically engaged when a Dolby Digital bitstream indicatesThis feature can be turned off by setting Mono Decoding. Off.Focuses or softens the presentation of centerchannel sound.

To increase the bass, raise the bass compensation setting to a positiveChanging the system setup. Press the Settings button to open the Settings menu on your TV screen. Using the downPress the EnterFigure 8. Map of the System Setup. Menus. Settings source. StopPrevious. RepeatSystem Setup. DVD Setup. Display Brightness. Auto Select Audio Track. Display Language. Auto Subtitle. DVD Autoplay. Optical Source. Aspect Ratio. Optical Input. Image Format. Record Out Processing. Parental Control. TV Power. Remote Control Setup. Enter Password. Send IR Commands. Receive IR Commands. Channel Spacing. Video Format. Video Black Level. Component Video.